


REPLACEMENT OF SPD-SL PEDAL BODY COVER

Note:
The body cover is a consumable part. Replace the body cover with a new one before any part of the body cover becomes flush with the pedal.
If you continue to ride the bicycle without replacing the body cover, it may damage the pedal.

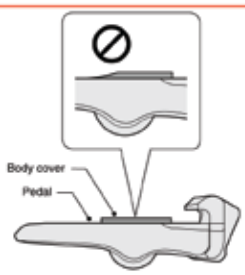

REMOVE THE COVER

Use a flat head screwdriver to remove the body cover. Press down on the insert tabs on each forcer of the pedal. Note that the tabs are on the underside. Refer to table below and select the correct body cover, then replace.

Pedal	Body Cover Part Numbers
PD-R540	Y45F0600
PD-R600	Y43W02000
PD-5600	Y45F06000
PD-6600	Y43Y03000
PD-6610	Y45F06000
PD-6620	Y42T98030
PD-6620G	Y42T98030
PD-7750	Y42U09000
PD-7800	Y42V03000
PD-7810	Y42T98030

MAINTENANCE OF THE AXLE UNITS

If you experience any trouble with the rotating parts of the pedal, the pedal may require adjustment. Obtain advice from a professional dealer.

MOUNTING THE REFLECTORS (OPTIONAL)

An optional reflector set (SM-PD58) is available. Please contact a professional dealer for details.