


## PD-M545 & M424: Cage & Cap End Replacement



Drop pedal axle into tool (TL-PD40). This will fasten lock bolt onto pedal. Then unthread lock bolt from the pedal body.



Remove axle from pedal body. Inspect and clean axle at this time. Also, remove the sleeve.

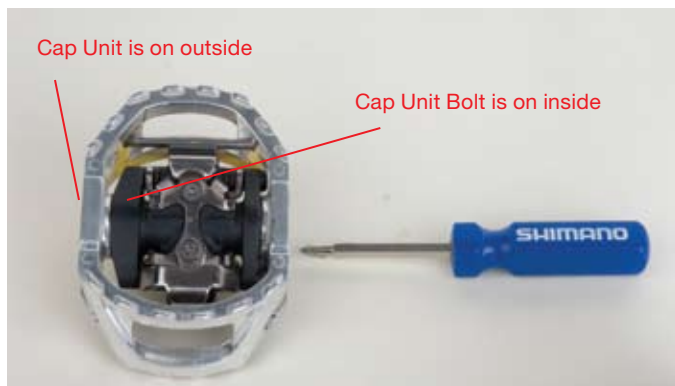


Insert Phillips screwdriver into pedal body. Locate and then remove the Cap Unit Bolt inside. This will enable you to remove the Cap Unit on the outside of the pedal body.



Once the Cap Unit Bolt is removed from the inside of the pedal, the Cap Unit on the outside can be removed and the worn cage can be separated from the pedal. Replace with a new cage.



Once the new cage has been placed in position, reverse your steps. Install the springs, ring, and cap unit. Then make sure to secure with the Cap Unit Bolt.

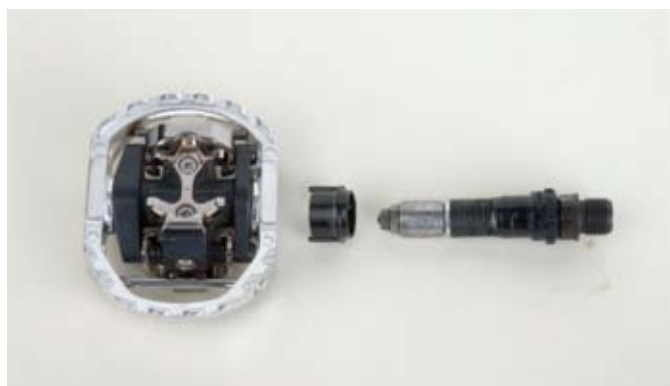

Insert the sleeve and axle with the lock bolt. (Apply grease) Secure with TL-DD40.